



700 Pine Ridge Road Golden CO 80403 **Tel** (303) 278 8287 1(888) 4X4 SLEE **Fax** (303) 278 7182

Slee Off-Road Brake Lines - All Toyota Applications - Brake Line Orientation Installation Instructions



Note; photo shown may or may not match lines ordered. Descriptive purposes only.

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1-888-4X4-SLEE or at info@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important. Slee Off-Road guarantees all parts free from defects for one year from the original purchase date.

Slee Off-Road Brake Lines - All Toyota Applications - Brake Line Orientation Installation
Instructions - 2 of 3

1. Washer placement shown for all applications where there is a female end on the brake line.

Note; always verify brake line(s) are free from obstruction(s) by cycling steering wheel from side to side.

Disclaimer; installation of these lines should be done by a qualified facility or technician. Improper installation could lead to serious injury, death or property damage.




2. 1991-97 Land Cruiser / LX450 front brake line routing shown.




Slee Off-Road Brake Lines - All Toyota Applications - Brake Line Orientation Installation
Instructions - 3 of 3

3. 1991-07 Land Cruiser / LX450 / LX470 (80 / 100 Series) Rear Brake line orientation shown.

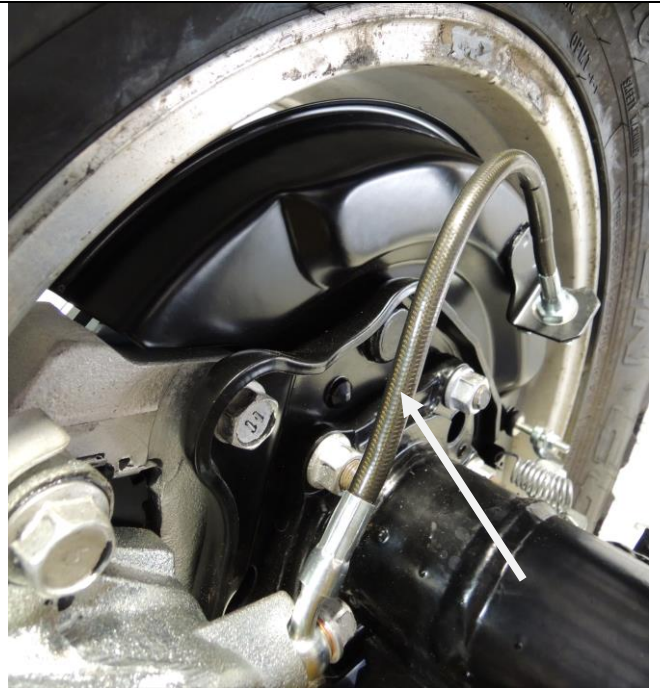

4. 1991-07 Land Cruiser / LX450 / LX470 (80 / 100 Series) rear brake line Banjo orientation shown.

Note; brake line doesn't follow factory "slot" in brake caliper.

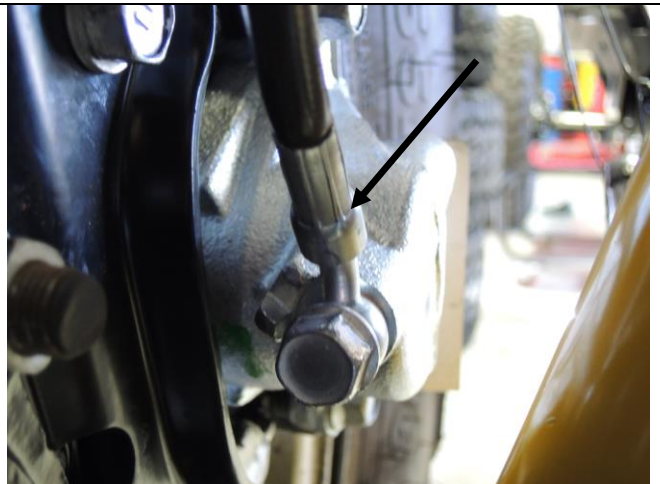

Thank you for your purchase from Slee Off-Road! Visit us at www.sleeoffroad.com or email us at info@sleeoffroad.com. Follow us on Facebook and Instagram!

