


Toyota OEM Hand Throttle
Fits 1991-1997 Toyota Land Cruisers*

*Certain vehicles might need additional parts. Ensure that your throttle assembly has proper mounting points. Contact us for more details.

Qty	Part Included	Tools Needed
1	Hand Throttle Cable Assembly	Phillips Head Screwdriver
1	Lock Nut	
1	Knob	

Thank you for purchasing Slee Off-Road parts for your Land Cruiser. All attempts have been made to supply the bracket and related parts in perfect condition with complete installation hardware. However should you have any problems with the condition of the parts or find any parts missing, please do not hesitate to contact us at 1888 4X4 SLEE or sales@sleeoffroad.com

Your Slee Off-Road parts are guaranteed free of defect in material and workmanship for a period of one year from date of purchase. Should you experience any problems, please contact us directly to resolve any issues. We have attempted to provide complete installation instructions provided below. However from time to time changes might be made to parts and associated hardware and you might notice small inconsistencies with the instructions. Please notify us of such occurrences so we can correct them.

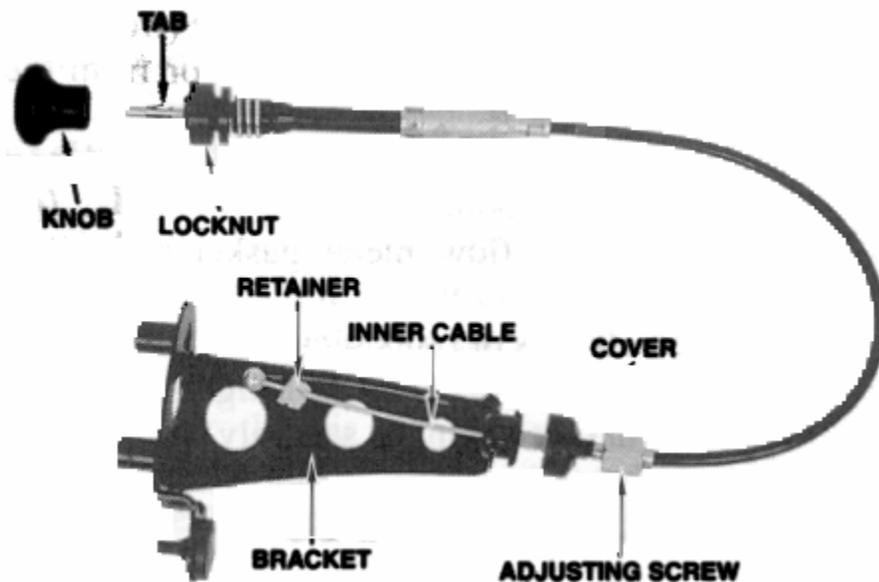

Installation Instructions

1. Remove the three mounting screws that secure the plastic dash plate located under the steering wheel. Once the screws are located and removed, pull the plastic plate carefully to unclip it from the vehicle. Be careful not to break the clips.
2. Remove the small black plug located in the indent on dash plate.
3. Install cover end piece of the outer cable in the mounting bracket by pushing the cover into the hole.
4. Adjust the cable to have about 5 mm of free play
5. Insert the inner cable retainer into the top bracket on the gas pedal. Make sure that it is properly seated.

6. Insert the other end of the cable through the opening in the metal plate of the dash and then through the small hole in the plastic dash cover.
7. Ensure that the throttle cable is properly seated and the straight edges of the threaded piece is in line with the straight edge on the hole.
8. Screw retainer ring onto cable assembly from the outside.
9. Refit plastic dash cover with three screws.
10. Test operation before pushing knob onto pedal.
11. Make sure there is no binding and adjust if necessary.
12. Idle RPM should not change, if after installation the idle rpm is too high, ensure that cable has free play.



Photo of upper part of the gas pedal. The J shaped bracket has to be present. If this is not, you would need to replace the gas pedal with a later model one.