



700 Pine Ridge Road Golden CO 80403 **Tel** (303) 278 8287 1(888) 4X4 SLEE **Fax** (303) 278 7182

Slee Off-Road – Slee Shocks General Installation Statement – 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner (Includes; SOF1136, SOF1156, SOF1257, SOF1258, SOF1259, SOF1260, SOF1227, SOF1230 & SOF1247) - Installation Instructions



Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1-888-4X4-SLEE or at info@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important. Slee Off-Road guarantees all parts free from defects for one year from the original purchase date.

Slee Off-Road and Slee & Co under no circumstances will be held liable for any damages or injuries to the users of this product(s) and or their equipment as a result of the use of this information or parts obtained from Slee Off-Road.

Slee Off-Road – Slee Shocks General Installation Statement – 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner (Includes; SOF1136, SOF1156, SOF1257, SOF1258, SOF1259, SOF1260, SOF1227, SOF1230 & SOF1247) - Installation Instructions - 2 of 5


1. Get organized and verify all parts are present.

Slee Shocks are designed to be a direct bolt in replacement and include all necessary hardware / bushings where applicable.

Important; Rear shock orientations are critical, if installed incorrectly, damage will occur to the shocks and void the warranty.


Compatibility; 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner.

2. 1991-97 Land Cruiser / LX450 Front Shock installation reservoir location Step 2A & 2B. Rear shock orientation 4C.

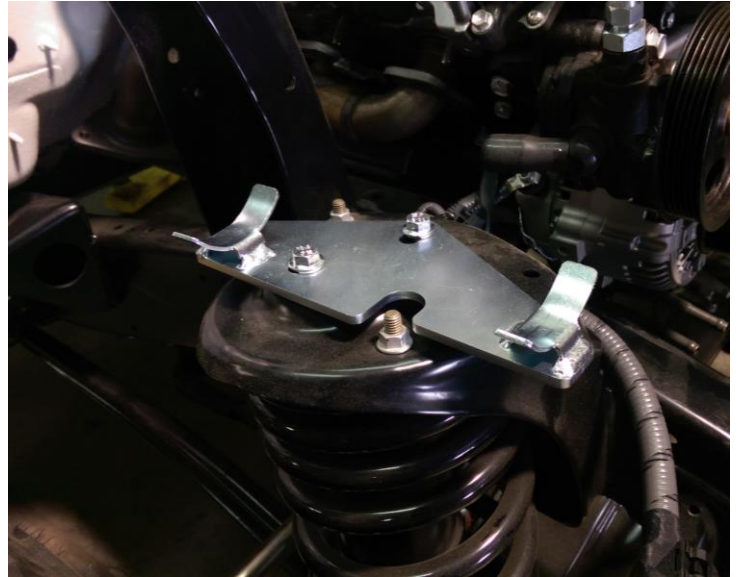

80 Series - Front shock reservoir bracket installed (**Step 2A**)

Slee Off-Road – Slee Shocks General Installation Statement – 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner (Includes; SOF1136, SOF1156, SOF1257, SOF1258, SOF1259, SOF1260, SOF1227, SOF1230 & SOF1247) - Installation Instructions - 3 of 5

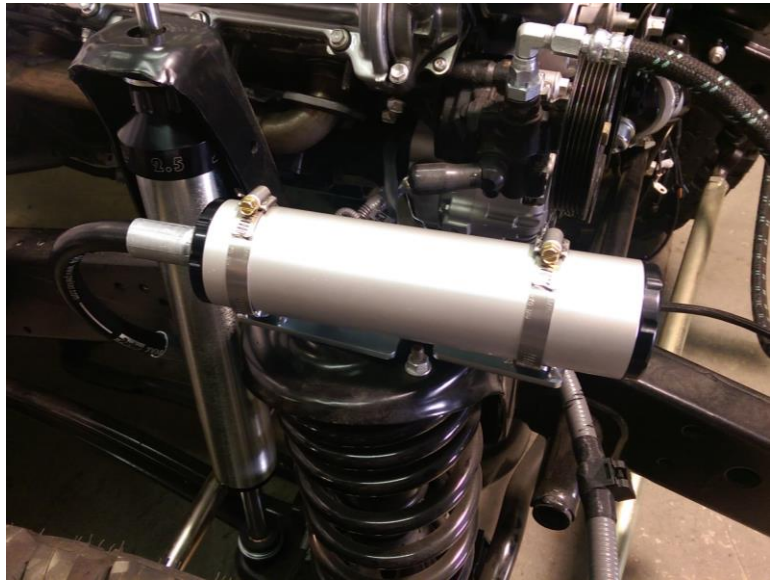

80 Series - Front shock reservoir installed (step 2B)




80 Series - Rear shock orientation (step 2C)

Slee Off-Road – Slee Shocks General Installation Statement – 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner (Includes; SOF1136, SOF1156, SOF1257, SOF1258, SOF1259, SOF1260, SOF1227, SOF1230 & SOF1247) - Installation Instructions - 4 of 5

3. 1998-07 Land Cruiser / LX470 front and rear shock orientation.



100 Series – Front shock orientation (**step 3A**)

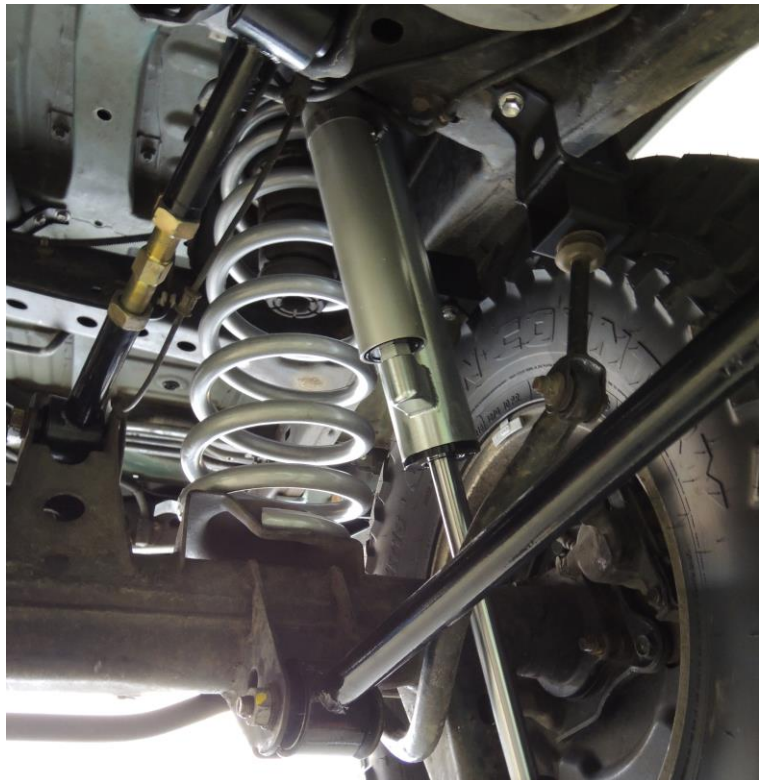

100 Series - Rear shock orientation (**step 3B**)

Slee Off-Road – Slee Shocks General Installation Statement – 1991-97 Land Cruiser / LX450, 1998-07 Land Cruiser / LX470 and 2010+ 4Runner (Includes; SOF1136, SOF1156, SOF1257, SOF1258, SOF1259, SOF1260, SOF1227, SOF1230 & SOF1247) - Installation Instructions - 5 of 5

4. 2010+ 4Runner rear shock orientation shown.



5th Gen 4Runner - Rear shock orientation **(Step 4)**

Thank you for your purchase from Slee Off-Road! Visit us at www.sleeoffroad.com or email us at info@sleeoffroad.com. Follow us on Facebook and Instagram! Use #sleeoffroad and @sleeoffroad

