



700 Pine Ridge Road Golden CO 80403 Tel (303) 278 8287 1(888) 4X4 SLEE Fax (303) 278 7182

Slee Off-Road 1998-07 Land Cruiser / LX470 (* Requires AHC Removal) - 2.5" Shocks (SOF1227 & SOF1230) - Installation Instructions



Qty	Parts Included
2	Slee Front Shocks - Includes bushings and washers
2	Slee Rear Shocks - Includes bushings and washers
4	Adel Clamps
4	5/16-18 Bolt Zinc

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1-888-4X4-SLEE or at info@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important. Slee Off-Road guarantees all parts free from defects for one year from the original purchase date.

Slee Off-Road and Slee & Co under no circumstances will be held liable for any damages or injuries to the users of this product(s) and or their equipment as a result of the use of this information or parts obtained from Slee Off-Road.

Slee Off-Road 1998-07 Land Cruiser / LX470 (* Requires AHC Removal) - **2.5" Shocks**
(SOF1227 & SOF1230) - Installation Instructions - 2 of 4

1. Get organized and verify all parts are present.

2. Verify bushing and washer orientation as shown. Bushings and washers are preinstalled on shocks.




Bushing and washer orientation (**Step 2**)

3. Remove front driver shock and install Slee shock. Reference factory service manual if necessary.
Locate position on driver side frame to mount reservoir.

Hardware;

- 1 x Slee Front Shock
- 2 x Adel Clamp
- 2 x 5/16-18 Bolt Zinc

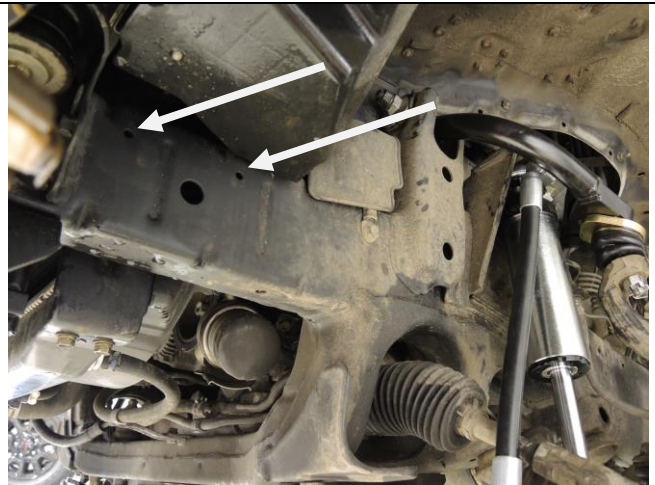

Driver reservoir mounting location (**Step 3**)

Slee Off-Road 1998-07 Land Cruiser / LX470 (* Requires AHC Removal) - **2.5" Shocks**
(SOF1227 & SOF1230) - Installation Instructions - 3 of 4

4. Remove front passenger shock and install Slee shock. Reference factory service manual if necessary. Locate position on passenger side frame to mount reservoir. Remove and discard two clips.

Hardware;

- 1 x Slee Front Shock
- 2 x Adel Clamp
- 2 x 5/16-18 Bolt Zinc



Driver reservoir location (**Step 4**)

5. Remove and install driver rear shock. Note bushing and washer orientation. Position the reservoir as shown.

Hardware;

- 1 x Slee Rear Shock

Disclaimer; if shock reservoir is orientated incorrectly it will contact frame, damage shock and void shock warranty.




Rear shock bushing and washer (**step 5A**)



Reservoir must be mounted as indicated (**step 5B**)

Slee Off-Road 1998-07 Land Cruiser / LX470 (* Requires AHC Removal) - **2.5" Shocks**
(SOF1227 & SOF1230) - Installation Instructions - 4 of 4

	 <p>Reservoir must be mounted as indicated (step 5C)</p>
<p>6. Remove and install passenger rear shock. Note bushing and washer orientation. Position the reservoir to mirror the driver side as shown in Step 5.</p> <p>Hardware; 1 x Slee Rear Shock</p> <p>Disclaimer; if shock reservoir is orientated incorrectly it will contact frame, damage shock and void shock warranty.</p>	
<p>7. Installation complete.</p>	

Thank you for your purchase from Slee Off-Road! Visit us at www.sleeoffroad.com or email us at info@sleeoffroad.com. Follow us on Facebook and Instagram!

