


**AC Dryer Skidplate**  
Use with ARB Winch Bumper on 93-97 Toyota Land Cruisers

Qty	Part Included	Tools Needed
1	SOF AC Skid Plate	Standard Hand Tools
3	8mmx30mm flange bolts	Drill
3	8mm nuts	1/8" Drill Bit
3	8mm flat washers	3/8" Drill Bit
3	8mm lock washers	

Thank you for purchasing a Slee Off-Road AC Dryer Skidplate for your Land Cruiser. All attempts have been made to supply the bracket and related parts in perfect condition with complete installation hardware. However should you have any problems with the condition of the parts or find any parts missing, please do not hesitate to contact us at 1888 4X4 SLEE or [sales@sleeoffroad.com](mailto:sales@sleeoffroad.com)


Your Slee Off-Road parts are guaranteed free of defect in material and workmanship for a period of one year from date of purchase. Should you experience any problems, please contact us directly to resolve any issues. We have attempted to provide complete installation instructions provided below. However from time to time changes might be made to parts and associated hardware and you might notice small inconsistencies with the instructions. Please notify us of such occurrences so we can correct them.

**Installation Instructions**

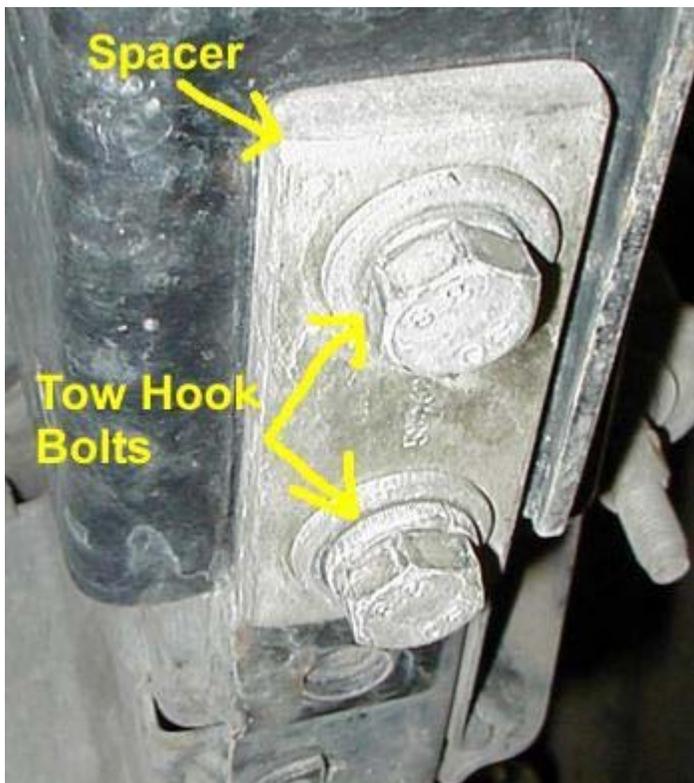

**ARB Spacer and mounting bolts**

1. Remove the two driver side 12mm bolts on the bottom of the ARB bar. If you re-installed the tow hooks with the ARB, then these are the bolts that hold the tow hook on. Do not discard these bolts. The bolts, tow hook and spacer will be re-used.
2. Install the skid plate using the two bolts removed in step 1. The ARB spacer fits between the skid plate and the bumper. It is not necessary at this point to install the tow hook, if it was removed in step 1.
3. The skid plate is installed so that the mounting tabs with the holes are inside the ARB bar.
4. Hand tighten the two

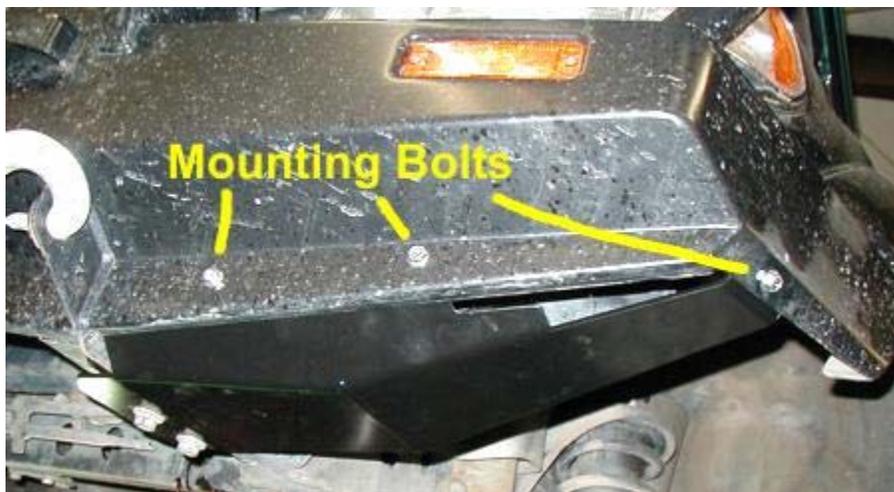

- 12mm bolts.
5. Make sure the mounting tabs are flush with the side and front of the ARB bar.
6. Mark each mounting tab hole on the bumper.
7. Remove the skid plate.
8. Center punch each mark and drill the ARB bar using a 1/8" pilot drill.
9. Drill holes to final size of 3/8".
10. In some cases the serial number plate on the ARB might interfere with the skid plate mounting tabs. If this is the case, drill the hole through the tag. The mounting tabs were positioned to clear the serial number tags, but ARB does not always weld them in the same spot.
11. Re install the skid plate, this time with the tow hook if it was removed in Step 1. Hand tighten the mounting bolts.
12. Using the supplied hardware install a bolt in each drilled hole. Use the washer, lock washer and nut on the inside.
13. Tighten the 12mm mounting bolts and the 8mm bolts and nuts.