



700 Pine Ridge Road Golden CO 80403 Tel (303) 278 8287 1(888) 4X4 SLEE Fax (303) 278 7182

Slee Off-Road – Aftermarket Light Switches (2ND & 3RD Gen) – Various Toyota Models - Universal Installation Instructions



Qty	Part Description	Tools Required
1	Aftermarket Switch	Soldering Gun and Solder
1	Harness with short pigtail	Heat Shrink / E-Tape
		Zip Ties
		Basic Metric Tools / Phillips Screwdriver for dash disassembly

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1-888-4X4-SLEE or at info@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important. Slee Off-Road guarantees all parts free from defects for one year from the original purchase date.

Slee Off-Road and Slee & Co under no circumstances will be held liable for any damages or injuries to the users of this product(s) and or their equipment as a result of the use of this information or parts obtained from Slee Off-Road.

Slee Off-Road – Aftermarket Light Switches (2ND & 3RD Gen) – Various Toyota Models - Universal Installation Instructions

- 2 of 4

1. Get organized and verify all parts are present.

Compatibility; based upon your order the light switch you purchased will be compatible with your vehicle.

Known Compatibility Issue; 2010-Current 4Runner - the switch you purchased isn't compatible in this location (as shown).




2010+ 4Runner location shown that isn't compatible (**Step 1**)

2. Remove interior panels as per factory service manual. Install Harness of choice by following supplied instructions with the harness.

Locking tabs (two) per switch *must be* engaged for proper switch operation.

Hint; if front loading the switch it's most likely the locking tabs won't fully engage and switch will malfunction.

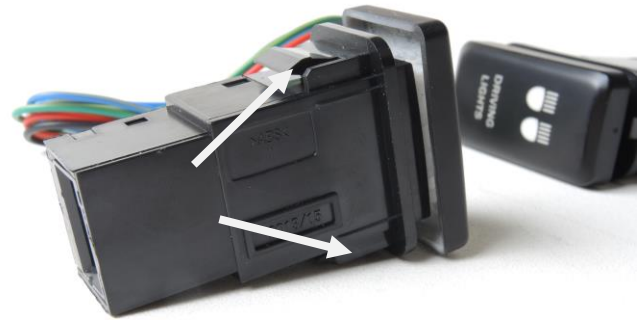

Ensure switch "locking tabs" are properly engaged (**Step 2**)

Slee Off-Road – Aftermarket Light Switches (2ND & 3RD Gen) – Various Toyota Models - Universal Installation Instructions

- 3 of 4

3. Each switch includes a harness with pigtail. We recommend soldering for the best connections and reliability. Always insulate connections with shrink tube or electrical tape.

- Green with yellow trace - Trigger input (12v+)
- Red with yellow trace - Switch Output - to relay (12v+)
- Blue with yellow trace - Dash Light (12v+)
- Black - Dash Light Ground



Wiring instructions (**Step 3**)

4. Verify all connections and test switch.

When dash lights are turned on the switch should illuminate as in Step 4A.

If the switch is engaged and illumination is on the switch should light up as shown in Step 4B.



Switch operation verified with illumination (**step 4A**)



Switch engaged and illumination on (**step 4B**)

Slee Off-Road – Aftermarket Light Switches (2ND & 3RD Gen) – Various Toyota Models -
Universal Installation Instructions

- 4 of 4

- | | |
|---|--|
| 5. Re-install any interior pieces as removed.
Installation complete. | |
|---|--|

Thank you for your purchase from Slee Off-Road! Visit us at www.sleeoffroad.com or email us at info@sleeoffroad.com. Follow us on Facebook and Instagram!

