



700 Pine Ridge Road Golden CO 80403 Tel (303) 278 8287 1(888) 4X4 SLEE Fax (303) 278 7182

Slee Off-Road – [SwitchPro Engine Bay Mount] (SOK2011) – Installation instruction 1



For 200 Series LC and LX570

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1 888 4X4 SLEE or at sales@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important.

Slee Off-Road guarantees all parts free from defects for one year from the original purchase date. Slee Off-Road and Slee & Co under no circumstances will be held liable for any damages or injuries to the users of this product(s) and or their equipment as a result of the use of this information or parts obtained from Slee Off Road.

Slee Off-Road – [SwitchPro Engine Bay Mount] (SOK2011) – Installation instruction 2

QTY	Parts Included
1	SwitchPro Bracket
2	M8 x 16mm Flange Head Bolt
2	#10 Oversized Washer

Tools Required
Metric Tools
SAE Tools

NOTE: The Slee SOK2011 shares mounting holes with the SOK0013 ARB Compressor bracket. If installing both products, start with the air compressor bracket and its included instructions.

1 Organize the work area. Make sure all parts for the kit are present.



(Step)

2 Attach the SwitchPro relay to the bracket using the factory hardware and the supplied washers.

Hardware:

(2) #10 Oversized Washer




Attach the SwitchPro Relay to the bracket. (Step 2)

3 Attach the bracket to the inner fender. Route and connect the wiring as desired.

Hardware:

(2) M8 x 16mm Flange Head Bolt

This completes the installation of the Slee SOK2011 SwitchPro Bracket.

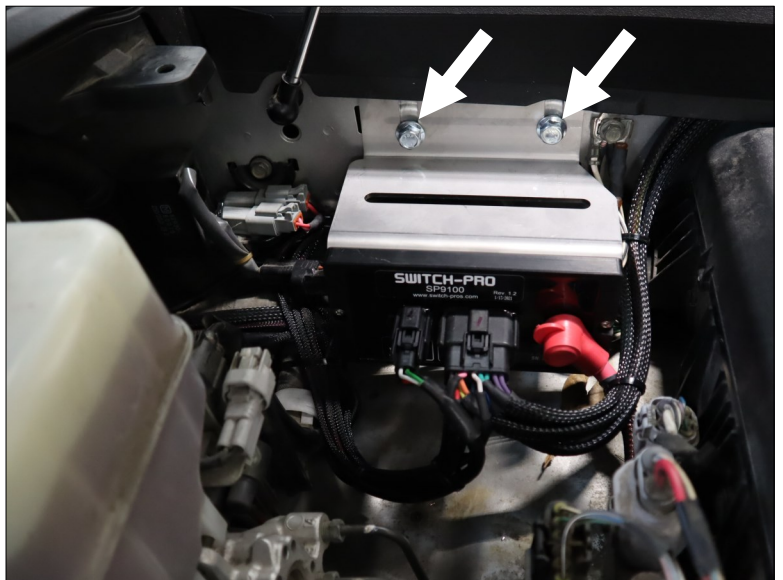

(Step)