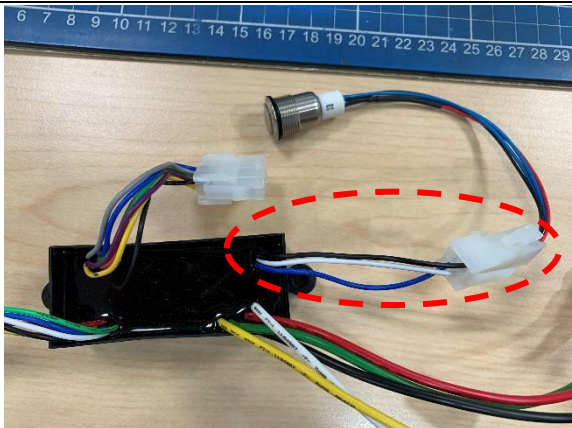
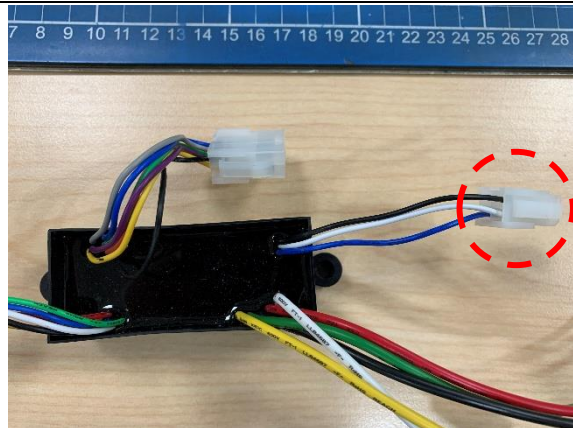
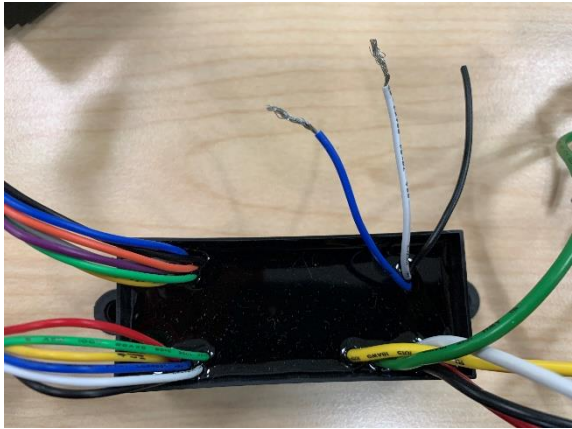
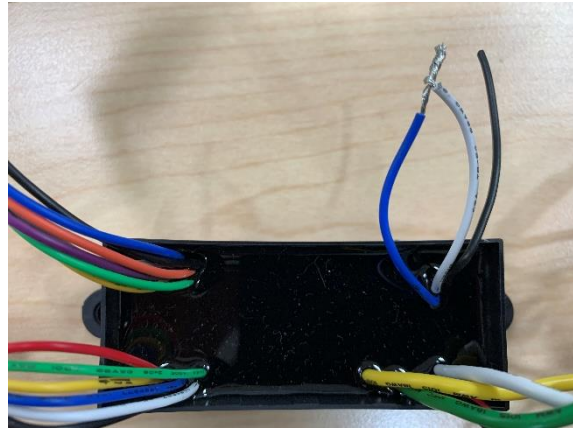


Modifying the switched control box #883579 to operate as #882780 control box.

Before modification	
	
<ol style="list-style-type: none"> 1. Disconnect the On/Off switch by unplugging the connector shown in the red circle in the above left picture. 2. To modify to #882780, cut the wires entering the connector shown in the red circle in the above right picture. 	
After modification	
	
<ol style="list-style-type: none"> 1. Shown in the above left picture are the three wires, blue, white and black. 2. The blue and white wires are spliced together to power the wireless module. Complete the splice with protection added (heat shrink, butt connector, etc.) 	
<p>With the blue and white wires connected, the module is always powered, which is the same as #882780 control box. The module has a parasitic draw of about 0.25mA.</p>	