700 Pine Ridge Road Golden CO 80403 **Tel** (303) 278 8287 1(888) 4X4 SLEE

**Slee Off-Road – [HI-LIFT BRACKET]** (SOK2047) – Installation instruction 1

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1 888 4X4 SLEE or at sales@sleeoffroad.com.

Slee Off-Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistences may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important.

Slee Off-Road guarantees all parts free from defects for one year from the original purchase date. Slee Off-Road and Slee & Co under no circumstances will be held liable for any damages or injuries to the users of this product(s) and or their equipment as a result of the use of this information or parts obtained from Slee Off Road.

**Copyright © Slee Off Road and Slee & CO**
The entire content of this document is property of Slee Off Road and may not be used or reproduced without permission. **Slee Off Road** Rev 1.0 – 07/22

**Slee Off-Road – [HI-LIFT BRACKET]** (SOK2047) – Installation instruction 2

| QTY | Parts Included |
|---|---|
| | **UPPER BRACKET** |
| 1 | Fabricated Upper Bracket |
| 5 | 3/8” x 1.25 Hex Bolt - Grade 8 |
| 10 | 3/8” USS Washer – Grade 8 |
| 5 | 3/8” Lock Nut |
| | |
| | **HI-LIFT BASE** |
| 1 | Fabricated Hi-Lift Base |
| 2 | Slee Hi-Lift clamps |
| 2 | 3/8” Nut - Grade 8 |
| 2 | 3/8” Lock Washer |
| 2 | 3/8” Large Fender Washer |

| Tools Required |
|---|
| SAE Tools |

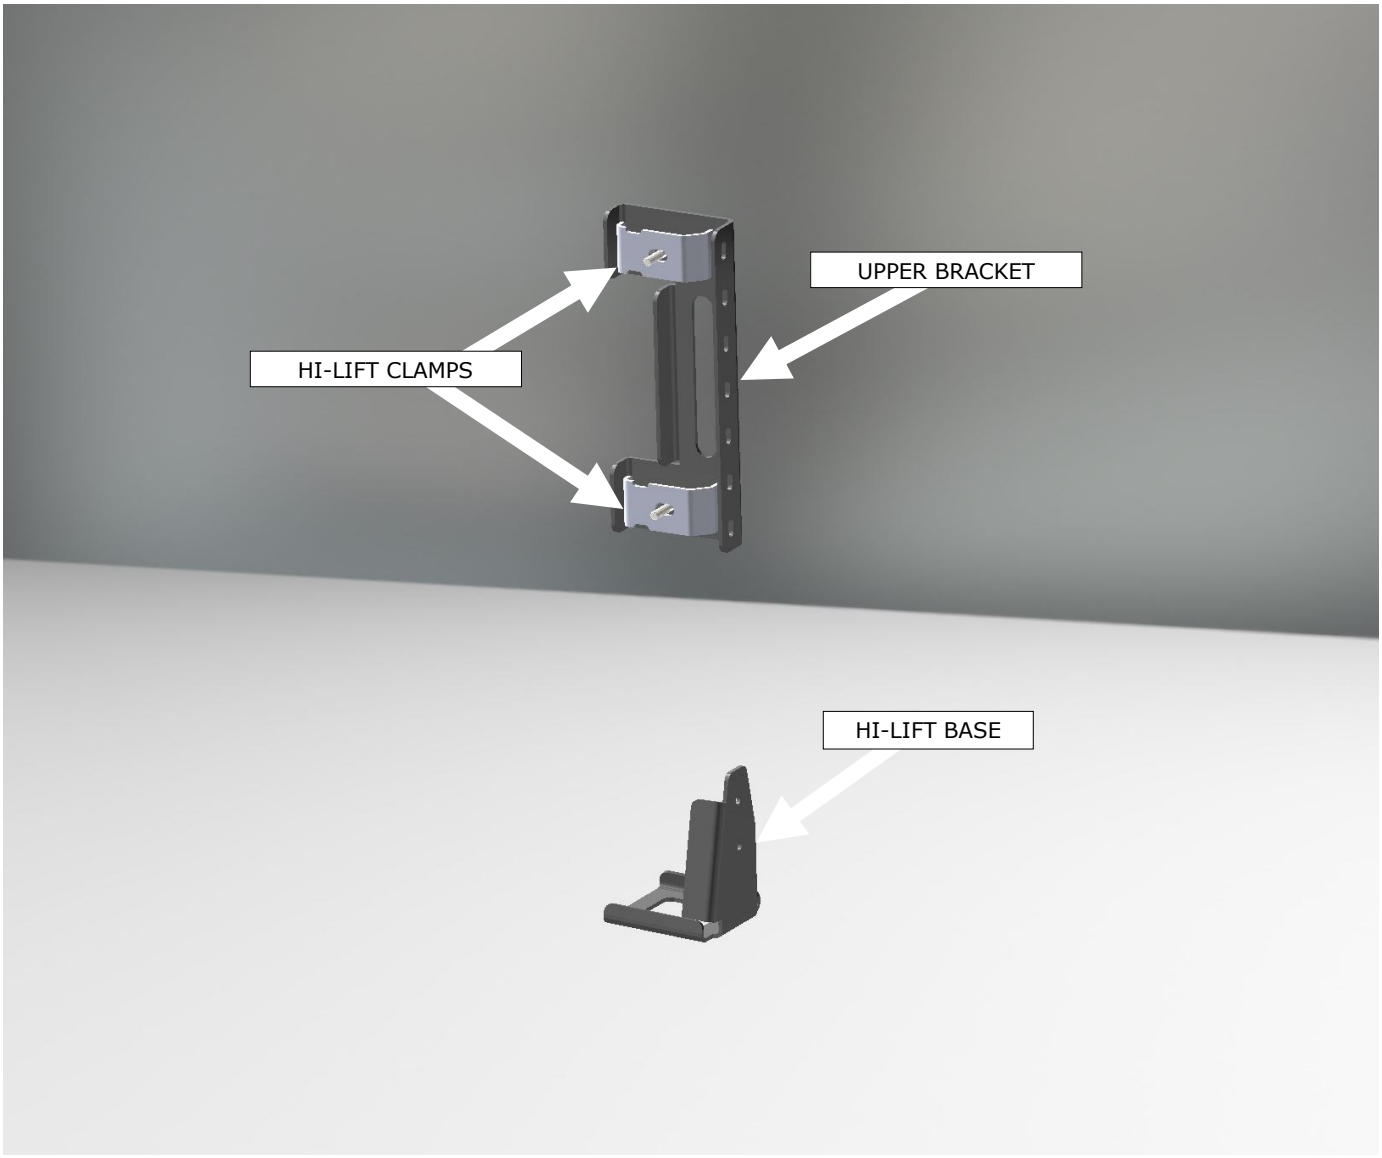


**Copyright © Slee Off Road and Slee & CO**
The entire content of this document is property of Slee Off Road and may not be used or reproduced without permission. **Slee Off Road** Rev 1.0 – 07/22

01 Temporarily install the tire to get the rough position of the tire mount.

The tire mount must be brought 1/8” closer to the bracket in order to ensure firm contact with the swing arm frame (Photo 39A).

Install the tire mount (Step 39A)

02 Install the Hi-Lift bracket onto the swing arm.

Install the lower bracket (Photo 40A)

Install the upper bracket (Photo 40B)

**Hardware:**

(5) 3/8” bolts

(10) 3/8” SAE Washers

(5) 3/8” Nyloc nuts

Install the lower bracket (Step 40A)

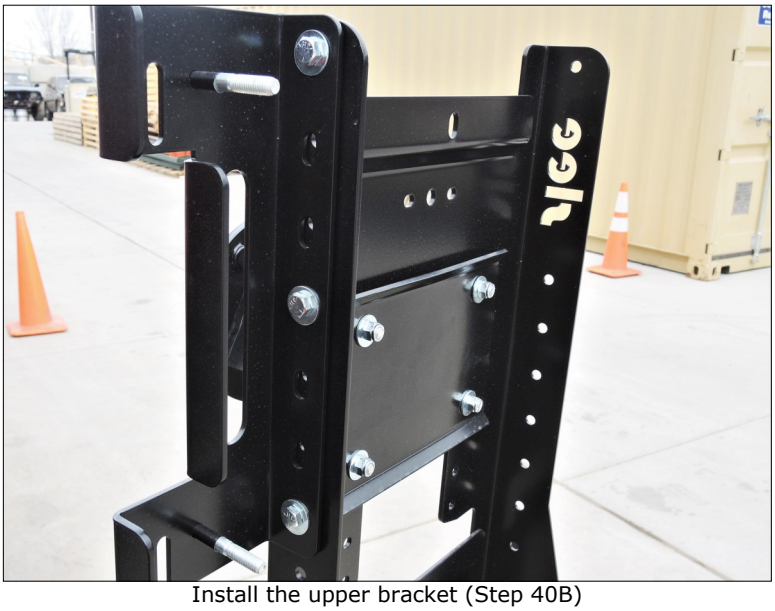
Install the upper bracket (Step 40B)

**Copyright © Slee Off Road and Slee & CO**
The entire content of this document is property of Slee Off Road and may not be used or reproduced without permission. **Slee Off Road** Rev 1.0 – 07/22

# 03 Mounting the Hi-Lift Jack

Place the Jack into the bracket as shown.

The curved part of the clamp goes around the handle.

Make sure that the running gear of the jack is near the bottom of the jack. This is so the clamp doesn't clamp down on the handle socket.

Stow the jack with the reversing latch in the up-right position.

**Hardware:**

(2) Slee Hi-Lift clamps

(2) 3/8” GR8 nuts (Clamp)

(2) 3/8” lock washers (Clamp)

(2) 3/8” Large Fender Washers (Clamp)

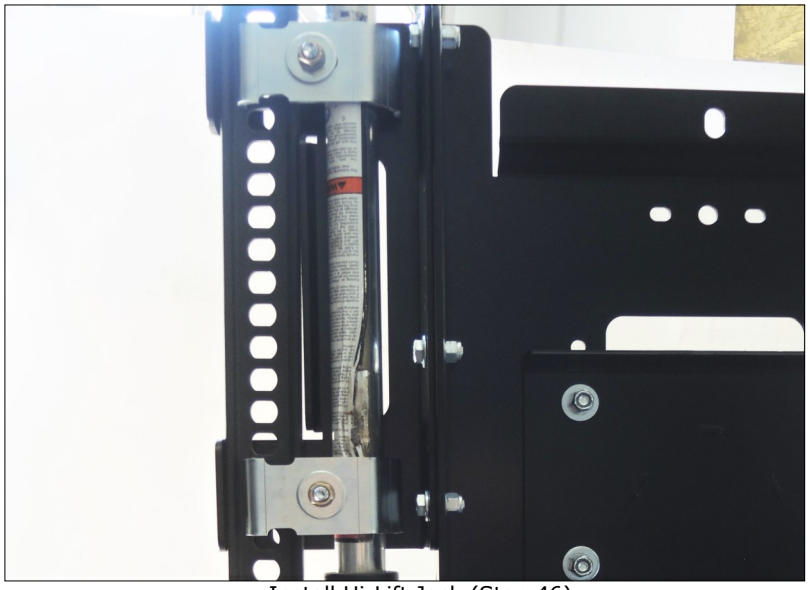

Install Hi-Lift Jack (Step 46)

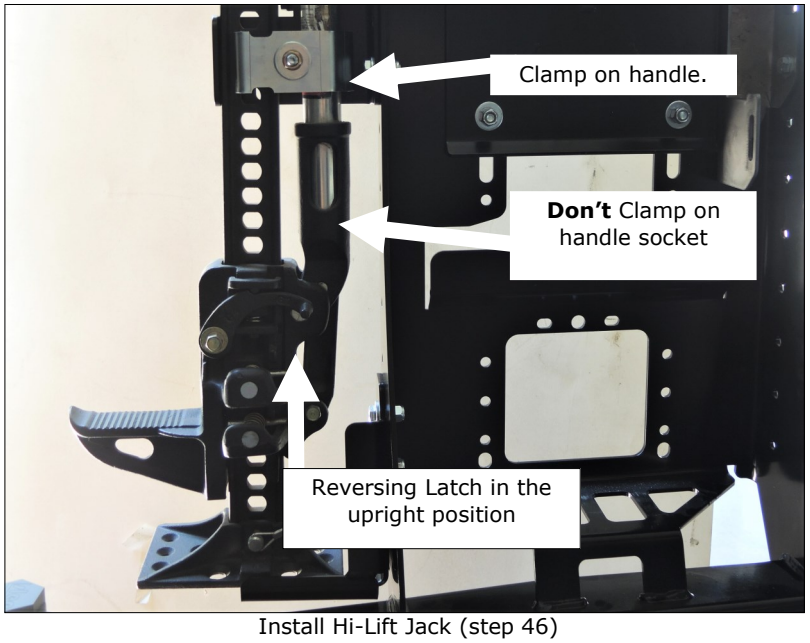


Install Hi-Lift Jack (step 46)

**Copyright © Slee Off Road and Slee & CO**
The entire content of this document is property of Slee Off Road and may not be used or reproduced without permission. **Slee Off Road** Rev 1.0 – 07/22