Rev. 3
2/2025
21-27022
21-27025

This manual is property of Redline Tuning Inc. Any unauthorized duplication or use without written permission from Redline Tuning Inc, violates Copyright laws.
Copyright © 2025 Redline Tuning Inc. All Rights Reserved.

2024+ Toyota Tacoma
2025+ Toyota 4Runner
QuickLIFT Installation Guide

Step 1 - Unpack QuickLIFT system and verify contents.

Remove all items from the packing tube. You should have the following before beginning:

* (2) Gas springs	**QL-133-8A**
* (1) Hood Bracket (right hand)	**32-00053**
* (1) Hood Bracket (left hand)	**32-00052**
* (1) Fender Bracket (right hand)	**32-00055**
* (1) Fender Bracket (left hand)	**32-00054**
* (1) Hex Flange Bolt	**38-00021**

38-00021 | **32-00053** RH Hood | **32-00052** LH Hood | **32-00055** RH Fender | **32-00054** LH Fender

Rod end: **72-00002** | **QL-133-8A** | Body end: **72-00002**

Step 2 - Gather the required tools.

Please gather the following tools before you begin:

* Socket wrench 13mm socket
* 12mm & 13mm open ended wrenches

Installation Video

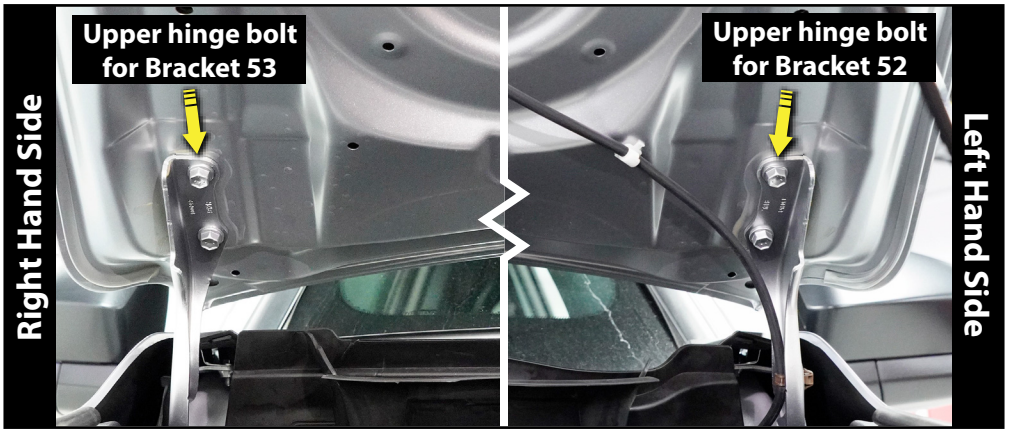

Locate both upper hood hinge bolts as shown to the left.

Note: Side of vehicle is determined from the driver's seat looking forward. Left-hand side is the driver's side in the U.S.

Step 3 - Install hood brackets.

A. With hood open, remove upper hood hinge bolt on left-hand side using a 12mm socket wrench.

B. Place LH hood bracket (Bracket 52) in this location with the ball-stud facing **inward** (keep bracket pressed tightly against hood frame while tightening).

C. Tighten hood hinge bolt back in place.

Repeat Step 3 on passenger side to install RH hood bracket [53]. Make sure ball-stud is facing inward on both sides as shown to right.

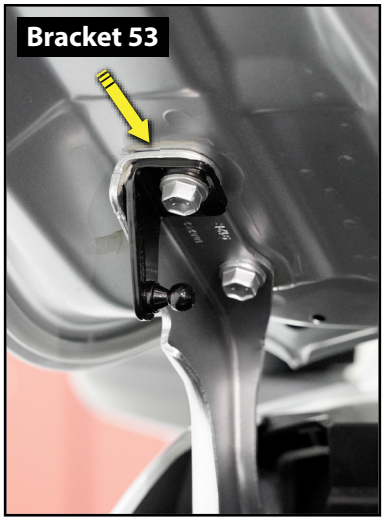

32-00055
RH Fender

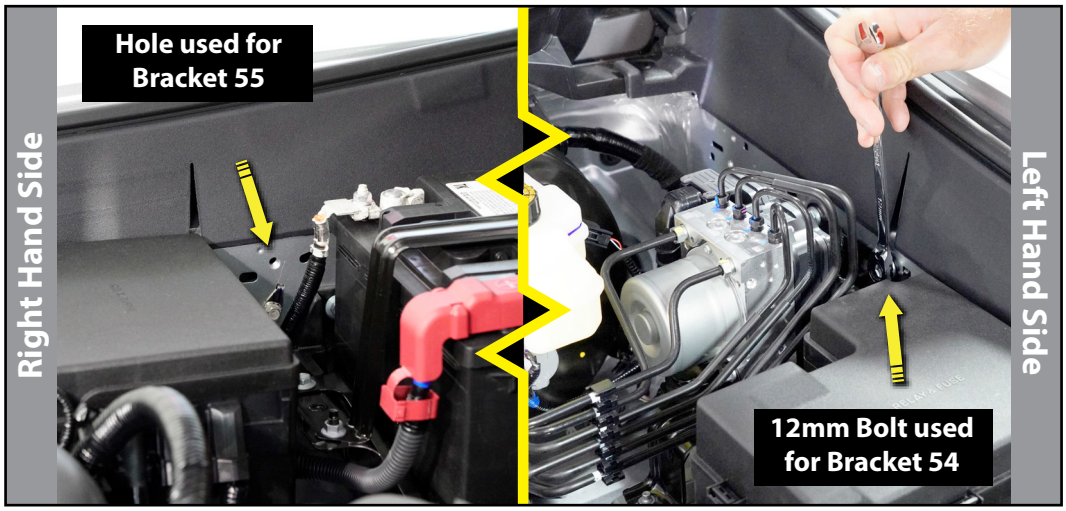

32-00054
LH Fender

Step 4 - Install RH inner fender bracket [55]

Models with hole shown above

A. First locate hole used for right-hand fender bracket - shown above.

B. Install bracket [55] in location with anti-rotation tab fitted into slot. Two different Tacoma trims are shown below - both will work. Route ground wire under ball stud as shown if present (**gas spring will NOT interfere with connector**)

C. Tighten down included bolt [38-00021] with a 13mm open-ended wrench.

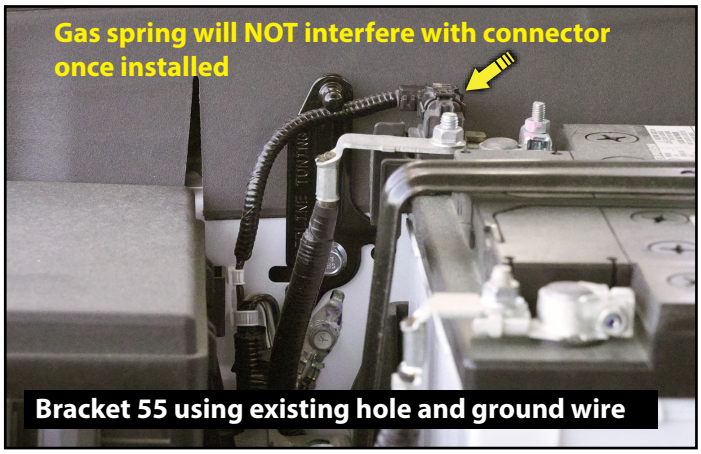

Hybrid models with bolt shown below

A. Hybrid models with coolant bottle mounted in this location, remove this bolt.
B. Place coolant bottle over bracket [55] with tab fitted into slot.
C. Tighten stock bolt back in place.

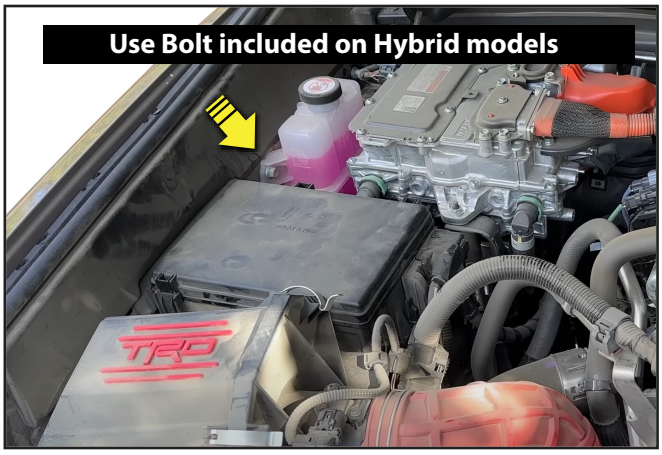

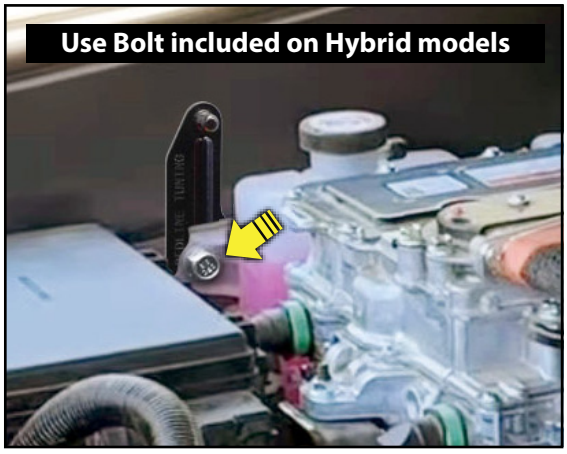

Step 5 - Install LH inner fender bracket

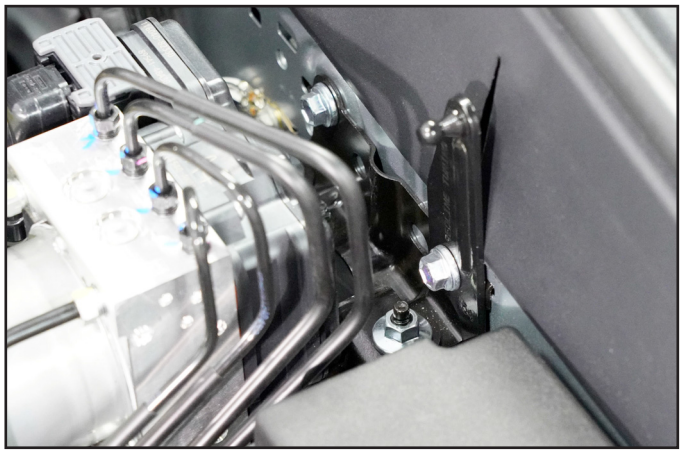

A. Locate and remove 12mm bolt, as shown above using 12mm open-ended wrench. This bolt holds the ABS module (front bolt) on side of inner fender (just behind fuse and relay panel shown top right of this page).

B. Install bracket [54] on top of vehicle's ABS bracket.

C. Use existing bolt and tighten bracket in place. [54] sits on top of ABS bracket with lower extension making contact with the ABS bracket. This extension keeps bracket vertical and stops any rotation.

Step 6 - Install gas springs.

A. Snap rod end of gas spring onto fender (lower) ball-stud.

B. Snap body end of strut onto hood (upper) ball-stud.
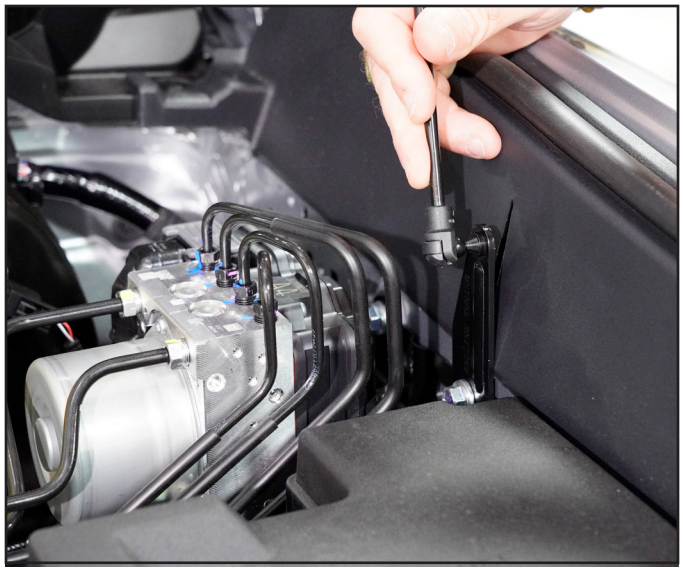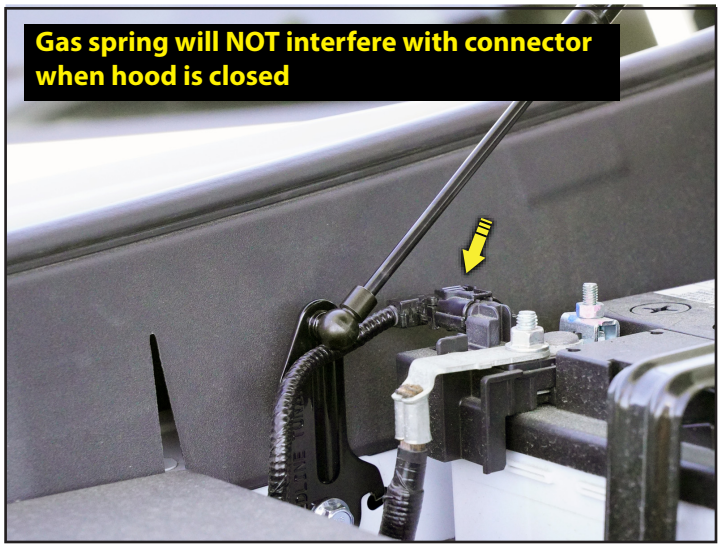
NOTE: Carefully rock the gas spring end fittings over ball-studs. This allows for the c-clip inside the end-fitting to spread apart and wrap around the ball-stud. If the socket is forced on, the c-clip will bend inward and the end fitting will pop off.